

MARES PUCK AIR DIVE COMPUTER

START HERE


PRESS RED BUTTON TO TURN ON:
DEFAULTS TO: PREDIVE MODE

PRESS AND HOLD BUTTON TO
CHANGE OR LOCK DATA
ESC – PRESS AND HOLD ESC TO
ESCAPE TO CURRENT MENU

KEY FEATURES

- SIMPLICITY OF ONE BUTTON USE
- SUPERIOR 170° VIEWING
- AIR INTEGRATED–EAN 21% TO 50%
- OPTIONAL PC USB INTERFACE
- RGBM MARES-WIENKE ALGORITHM
- USER-REPLACEABLE BATTERY
- MAXIMUM DEPTH 492 FT.
- 36 HOURS MAX DIVE LOG
- 2 YEAR WARRANTY

PUCK AIR – FLOW CHART

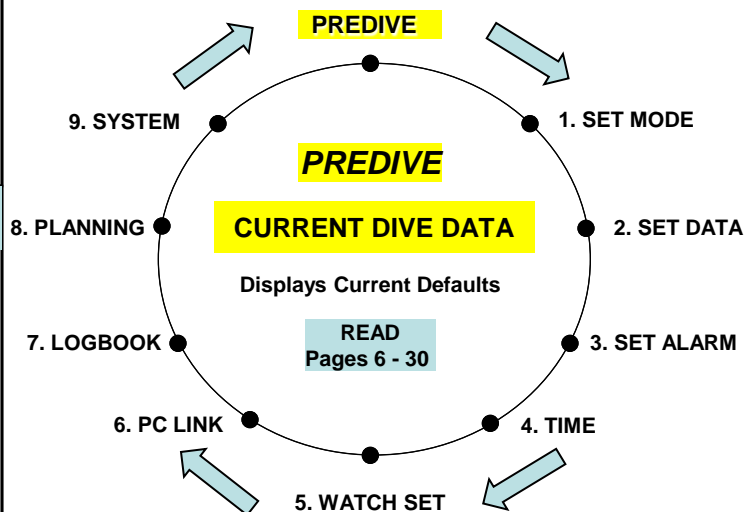

Hold "OK/ ESC" button down 2 seconds
for backlight illumination

PREDIVE

CURRENT DIVE DATA

Read and Understand
Pages 6 - 30

1. SET MODE

- 1.1 AIR - EAN - BOTTOM TIME
- 1.2 PFO
- 1.3 ALTITUDE
- 1.4 ESC

2. SET DATA

- 2.1 SALT or FRESH Water
- 2.2 IMPERIAL or METRIC
- 2.3 N2 RESET – YES / NO
- 2.4 ESC

3. SET ALARM

- 3.1 RESERVE AIR HIGH
- 3.2 RESERVE AIR LOW
- 3.3 FAST ASC ON/OFF
- 3.4 AT BEEP ON/OFF
- 3.5 ESC

4. TIME

- 4.1 CURRENT TIME
- 4.2 DATE
- 4.3 TEMPERATURE
- 4.4 ESC

5. WATCH SET

- 4.1 ADJ TIME
 - a. 12H / 24H
 - b. YEAR
 - c. MONTH
 - d. DAY
- 4.2 CONTRAST
- 4.3 SET BEEP
- 4.4 INTRO ON / OFF
- 4.5 ESC

6. PC LINK

- DOWNLOAD DATA to PC
- 5.1 LINK ON / OFF
 - 5.2 ESC

7. LOGBOOK

- 8.1 HISTORY OF:
 - MAX DEPTH
 - TOTAL DIVE TIME
 - TOTAL # OF DIVES
 - COLDEST TEMPERATURE
- 8.2 LOG BOOK DIVE #
- 8.3 LOG BOOK TECH DATA
(Individual Dive Details)
- 8.4 ESC

8. PLANNING

- 8.1 DISPLAYS NO DECO
TIME to MAXIMUM 157 FEET
(each quick press advances
display 10 feet)
- 8.2 ESC

9. SYSTEM

- 6.1 SERIAL NUMBER
- 6.2 FIRMWARE VERSION
- 6.3 RESET (# of times battery
as been replaced)
- 6.4 BATTERY CHARGE LEVEL
- 6.5 ESC

EXTRA FEATURES

- OPTIONAL AUDIBLE ALARM ON-OFF
- LITHIUM 3V CR2450 BATTERY
- BATTERY LIFE ESTIMATED at 170 DIVES
- SOFTWARE IS USER UPGRADEABLE
- MINERAL GLASS DISPLAY
- USES DRAK USB INTERFACE
- LOGBOOK STORES 40 HOURS OF DETAILS AT 20 SECOND POINTS